


# SCOTTISHSLATEGIFT

## What's Included




Glue




Steel Bars

## Tools Required



Drill



6mm Drill Bit



Spirit Level




Marker Pen

## Step 1



Place your sign face down (on a towel or similar to prevent scratching the face of the sign), squeeze a small amount of glue into the pre-drilled holes and insert the steel bars. Ensure that the bars are standing straight at 90 degrees. Clean any excess glue from around each bar and allow to set in place for 24 hours before continuing with installation.

## Step 2

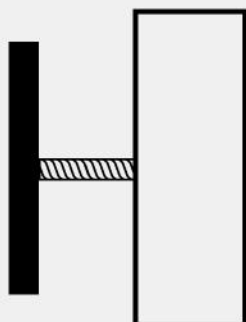


Place the sign in position on the wall ensuring that it is level, mark the position of the steel bars on the wall by drawing around each one.

Drill holes using a 6mm masonry drill bit ensuring that they are at least 70mm deep.

We recommend first drilling a pilot hole with a smaller drill bit to prevent 'drifting'.

## Step 3

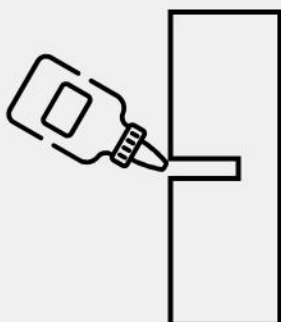

Carefully half fill the drilled holes with adhesive. Guide your sign into position by inserting the steel bars into the drilled holes. Hold the sign in place for 5 minutes (approx) to allow the adhesive to grab, it will fully set within 24 hours.

## Tip

Choose a level area to mount your sign ensuring you're going to be drilling into solid flat brickwork, we don't advise using brick joints as a mounting position.

**Now stand back and admire your handy work!**