


# SCOTTISHSLATEGIFT

## What's Included




Screws


## Tools Required



Drill



6mm Drill Bit




Spirit Level




Screwdriver

## Step 1

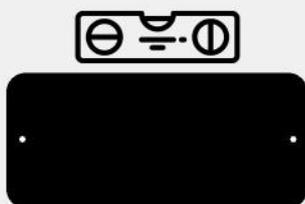


Position your sign into the desired location, use a spirit level to ensure it is straight, then mark the centre of the holes.

## Step 2

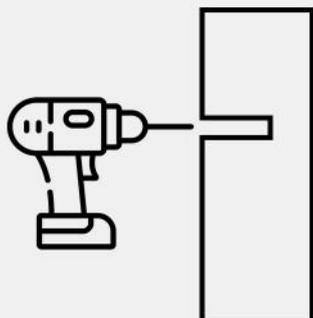

Drill your holes using a 6mm masonry drill bit and insert wall plugs. We advise drilling a pilot hole first with a smaller drill bit.

## Step 3

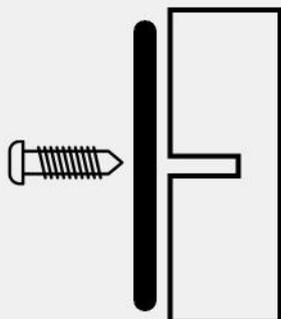

Place your sign into position and fix into place with the screws.

Don't over-tighten the screws and take care not to slip with the screwdriver and damage the face of the sign.

## Tip

Choose a level area to mount your sign ensuring you're going to be drilling into solid flat brickwork, we don't advise using brick joints as a mounting position.

**Now stand back and admire your handy work!**